

Raspberry Pi Pico HAT Expansion





Contents

User Manual	1	
Introduction	3	
<u>Features</u>		5
<u>Specification</u>	5	
Hardware Dimension	6	
Installation Process	.7	



Raspberry Pi Pico HAT Expansion

Introduction

Raspberry Pi Pico HAT Expansion is an input/output expansion board designed for the Raspberry Pi Pico, which provides one set of 2x20 pin headers in the form of a Raspberry Pi Header along with one set of 2 x 20 pin. It means that one can plug any HAT designed for Raspberry Pi with the Raspberry Pi Pico via the Raspberry Pi Pico HAT Expansion that would make the user perform the advanced functions on it.

Raspberry Pi Pico HAT Expansion has the space on its board for any HAT. One can plug Raspberry Pi Pico and a HAT by directly putting it on the Raspberry Pi Pico HAT Expansion that has the power pins for the connection. Raspberry Pi Pico Expansion is a board on which, clear and descriptive pin labels make the process easier for the user.



Pin Out

	PIN	RPi GPIO	PICO		PIN	RPi GPIO	PICO	
I2C SPI	1	3V3	3V3	00	2	5 <i>V</i>	5V	
	3	GPIO2	GP20	00	4	5V	5V	-
	5	GPIO3	GP21	00	6	GND	GND	-
	7	GPIO4	GP6	00	8	GPIO14	GP0	-
	9	GND	GND	00	10	GPIO15	GP1	F
	11	GPIO17	GP7	00	12	GPIO18	GP28	UART
	13	GPIO27	GP8	00	14	GND	GND	_
	15	GPIO22	GP9	00	16	GPIO23	GP27	_
	17	3V3	3V3	00	18	GPIO24	GP26	
	19	GPIO10	GP3	O	20	GND	GND	_
	21	GPIO9	GP4	00	22	GPIO25	GP22	_
	23	GPIO11	GP2	00	24	GPIO8	GP5	CS
	25	GND	GND	00	26	GPIO7	GP19	O
	27	Χ	Χ	00	28	Χ	Χ	_
	29	GPIO5	GP10	00	30	GND	GND	_
	31	GPIO6	GP11	00	32	GPIO12	GP18	_
	33	GPI013	GP12	00	34	GND	GND	_
	35	GPIO19	GP13	00	36	GPIO16	GP17	_
	37	GPIO26	GP14	00	38	GPIO20	GP16	_
	39	GND	GND	00	40	GPIO21	GP15	



Features


- 2x20 pins header
- Clear and descriptive pin labels
- Connect any HAT
- Raspberry Pi Connector for connecting HAT

Specification


- Interface 2x20 Male Berg Connector
- Compatibility Raspberry Pi HAT/ Shield
- Connectors Jumper Cable/ Stackable
- Compatible with Raspberry Pi Pico
- On-board female Header for Pico



Hardware Dimension

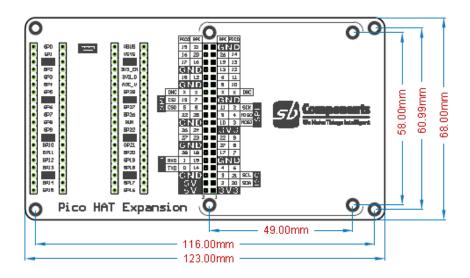


View from Front side (Scale 1:1)

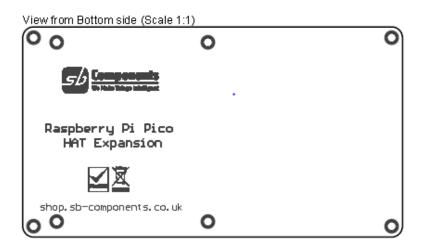



Installation Process

• Take Raspberry Pi Pico HAT Expansion

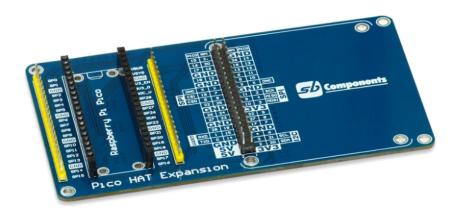

• Stack Raspberry Pi Pico on female 40 pins header of Raspberry Pi Pico HAT Expansion board as shown in picture below





 Stack any 40 pins Raspberry Pi compatible HAT on dedicated standard GPIO header as shown in picture below.



Note: Other than Power Pins and special purpose pins, all other GPIO Pins are not exactly the same as the Raspberry Pi. Please check the above Pinout diagram for actual pinout mapping for Raspberry Pi Pico.